



CDMX: + 52 55 5272 33 55
 USA: + 1 (307) 333 7094
 sales@securitywb.com
 www.securitywb.com

Instructions Manual

**Model
"A"**

Emergency exit compatible model





The box includes

Ⓐ Upper part (1 piece)

Ⓑ Lower part (1 piece)


Ⓒ Optional screed 7.4" with .8" hole (1 piece)

Ⓓ Security screws (4 pieces)

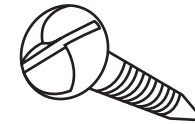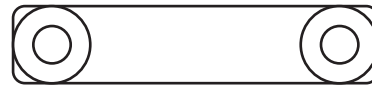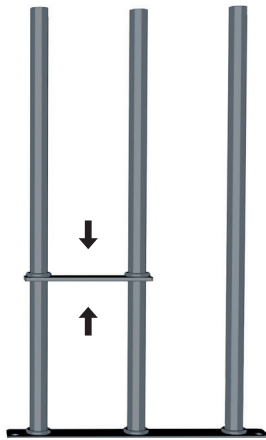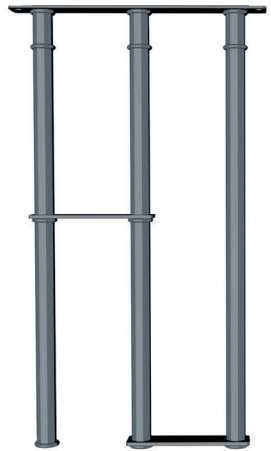

Ⓔ Flat lag screw 6 X 3/4 (5 pieces)



Ⓕ Plastic wall anchors 3/8" (4 pieces)

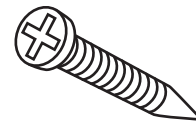


Make sure to place the wide tube (A) on top, to avoid leakage.

Installation

- 1 Measure the window and identify how many modules you need
***Note** that each module is 16 inches wide. Visit our website to confirm number of modules required depending on the length of each window.

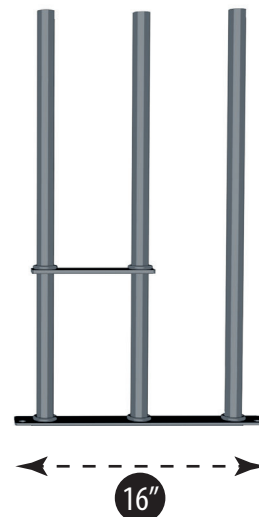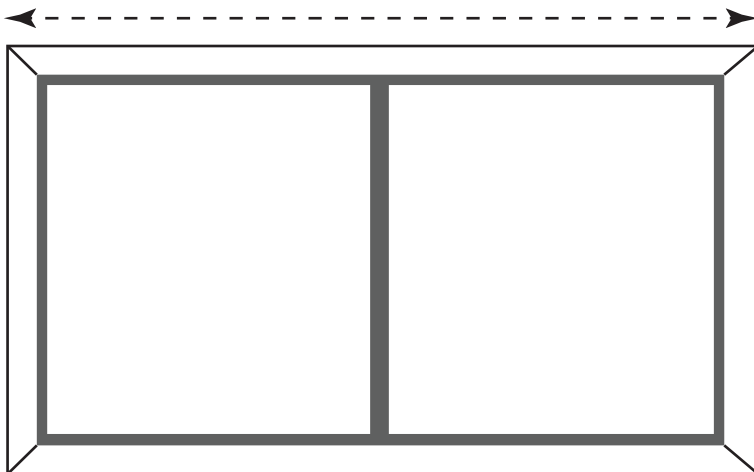

- 2 Mark and drill holes

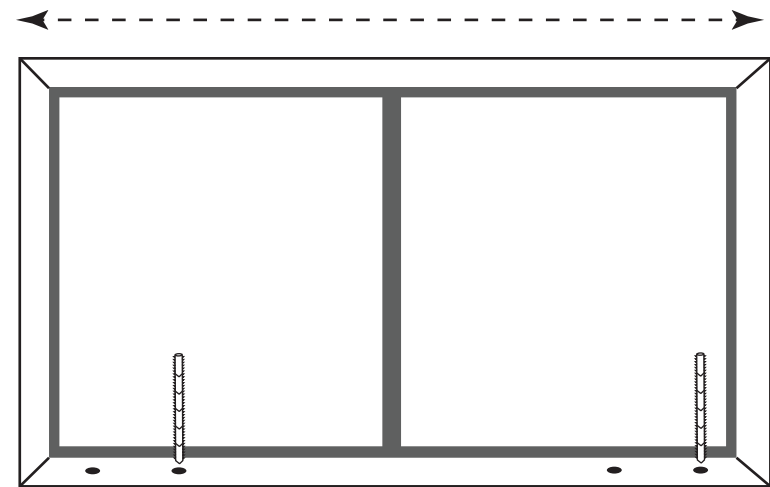




CDMX: + 52 55 5272 33 55
USA: + 1 (307) 333 7094
sales@securitywb.com
www.securitywb.com

Instructions Manual


Model "A"

Emergency exit compatible model


③ Place the optional mobile reinforcement-screed and donut (C) wherever you prefer and set it with the setscrew.

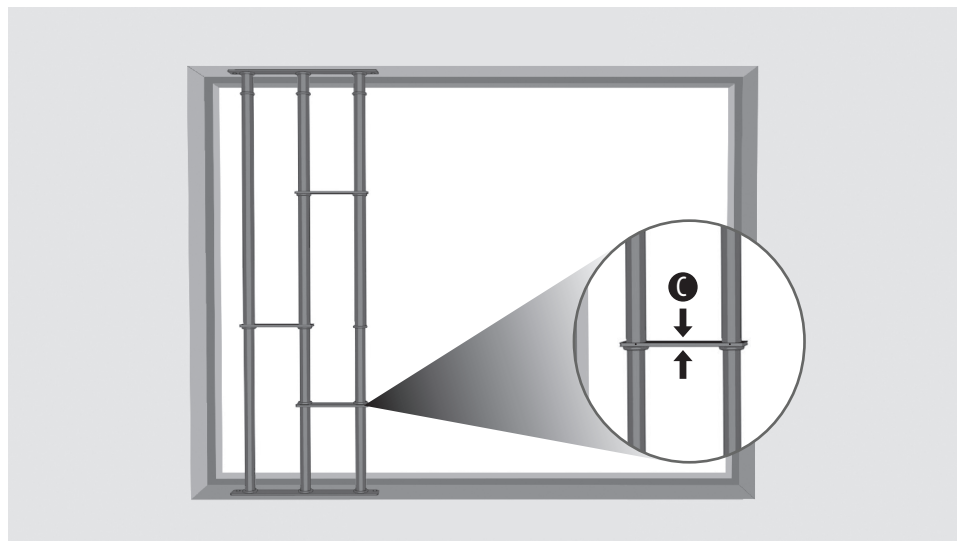


④ Expand the bar to the required height and hold with the setscrew.

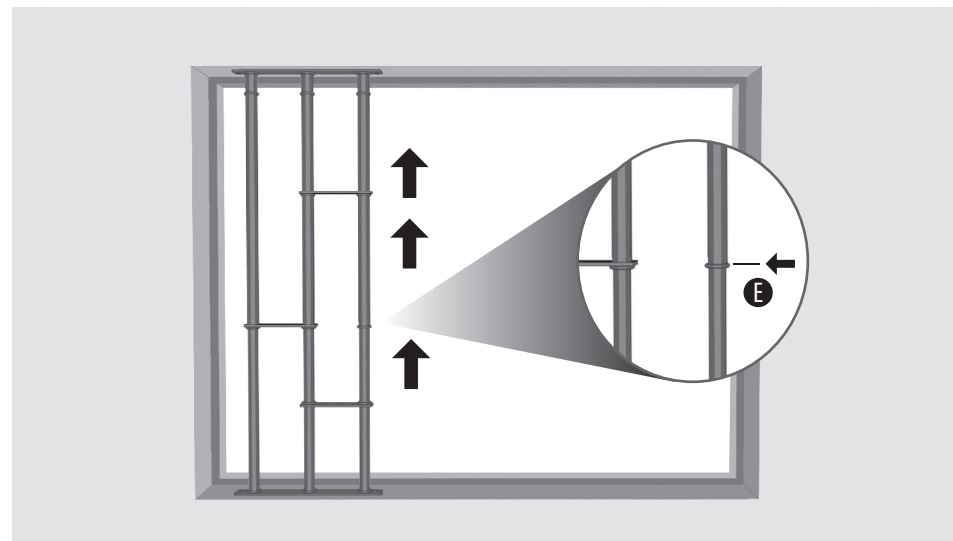

⑤ Set module (s) using anchors and security screws.

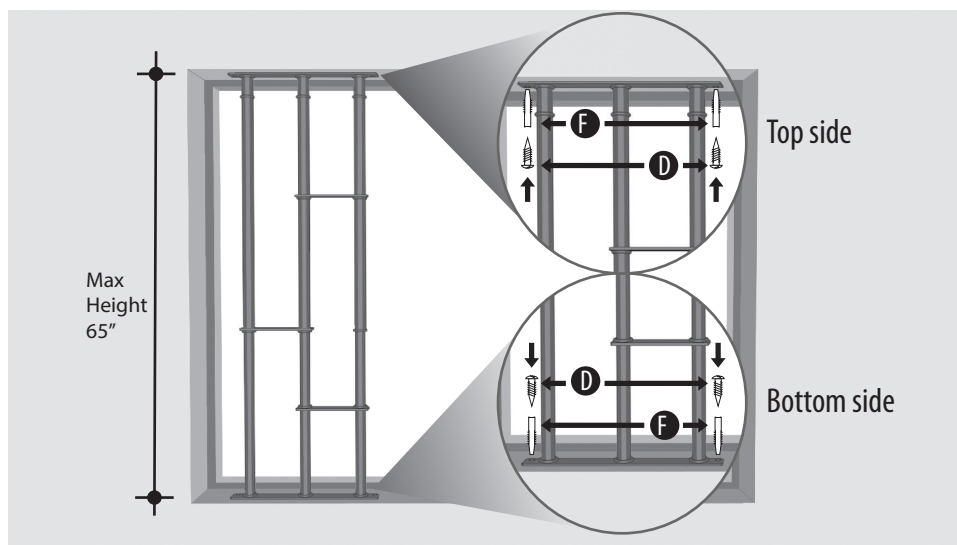

⑥ Installation finished

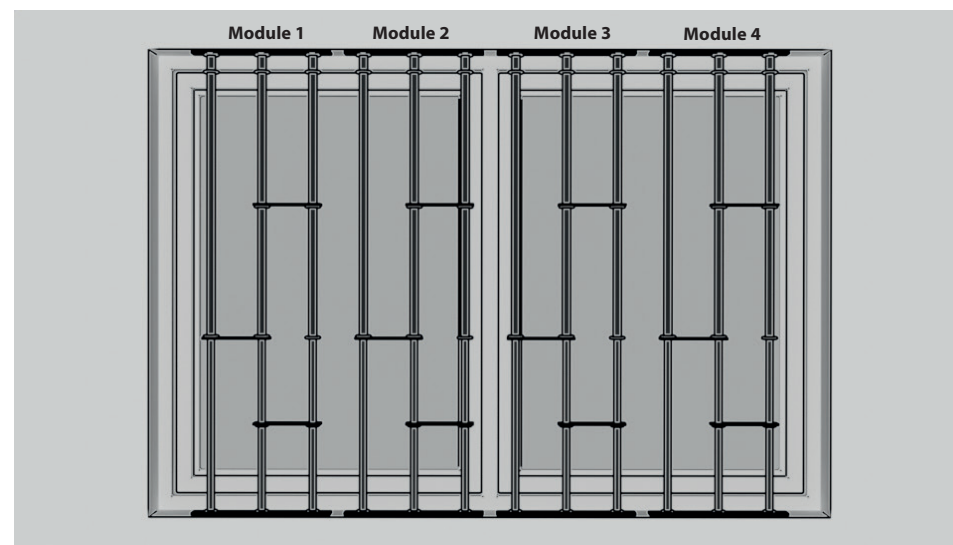

Safety Information: Please read and understand this entire manual before attempting to assemble, operate or install the product.

IMPORTANT: Consult local building and fire codes before installing window bars, as they may not be compliant in all areas. Additionally, the emergency exit kit is sold separately.