



CDMX: + 52 55 5272 33 55
USA: + 1 (307) 333 7094
sales@securitywb.com
www.securitywb.com

Instructions Manual

Model "B"

The box includes




Ⓐ Upper part (1 piece)

Ⓑ Lower part (1 piece)

Ⓒ Optional screed 7.4" with .8" hole (1 piece) and optional donut (1 piece)


Ⓓ Security screws (8 pieces)

Ⓔ Flat lag screw 6 X 3/4 (5 pieces)

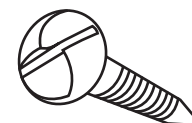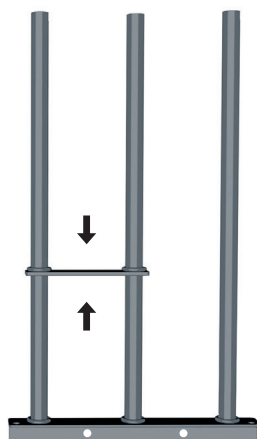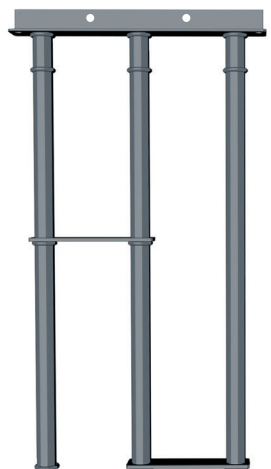

Ⓕ Plastic wall anchors 3/8" (8 pieces)

Ⓖ Plugs (4 Pieces)


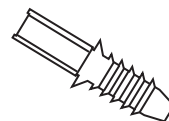


Make sure to place the wide tube (A) on top, to avoid leakage.


NOTE: These bars can be installed in outside or inside of each room, taking into account the window opening.

Installation

① Measure the window and identify how many modules you need
***Note** that each module is 16 inches wide. Visit our website to confirm number of modules required depending on the length of each window.

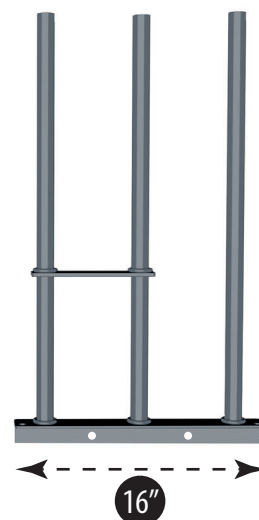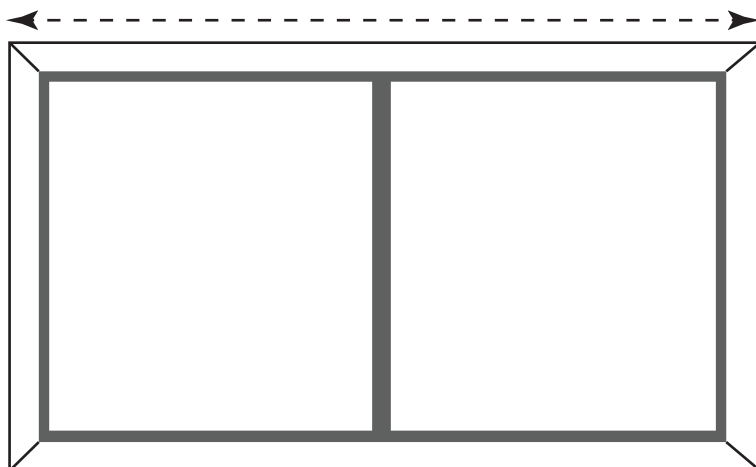

② Mark and drill holes

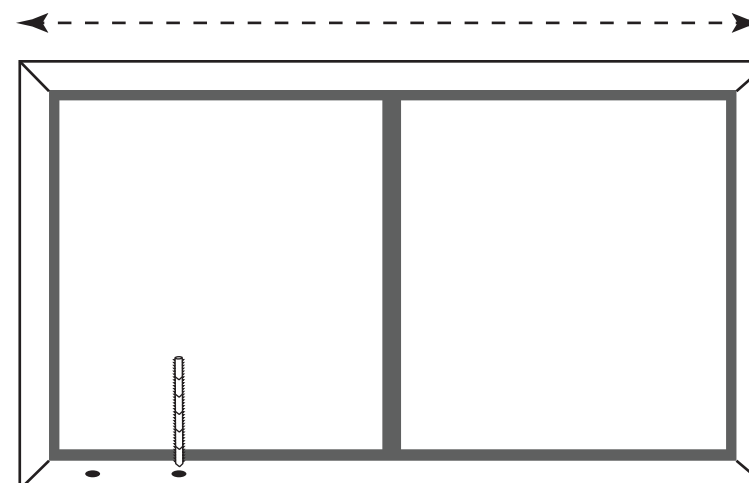




CDMX: + 52 55 5272 33 55
 USA: + 1 (307) 333 7094
 sales@securitywb.com
 www.securitywb.com


Instructions Manual

**Model
"B"**


③ Place the optional mobile reinforcement-screed and donut (C) wherever you prefer and set it with the setscrew.

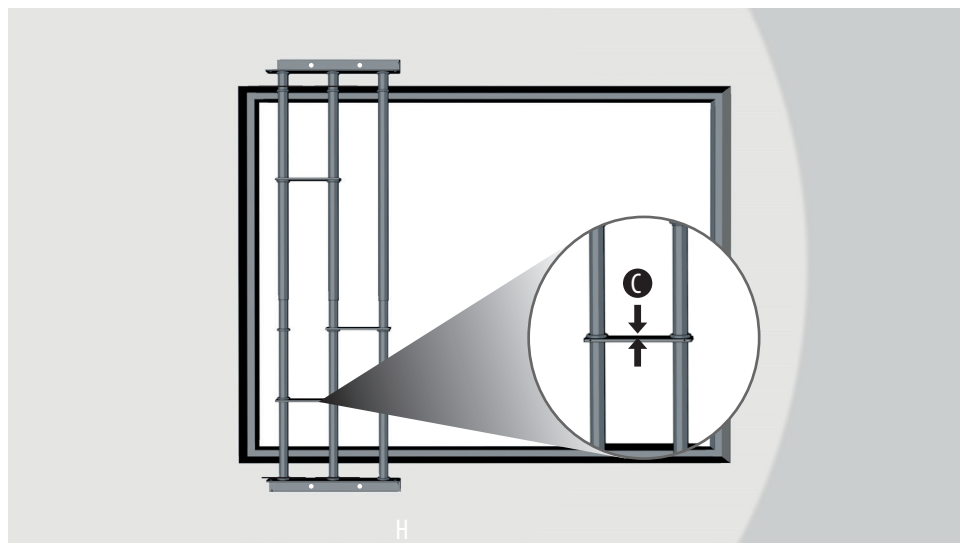


④ Expand the bar to the required height and hold with the setscrew.

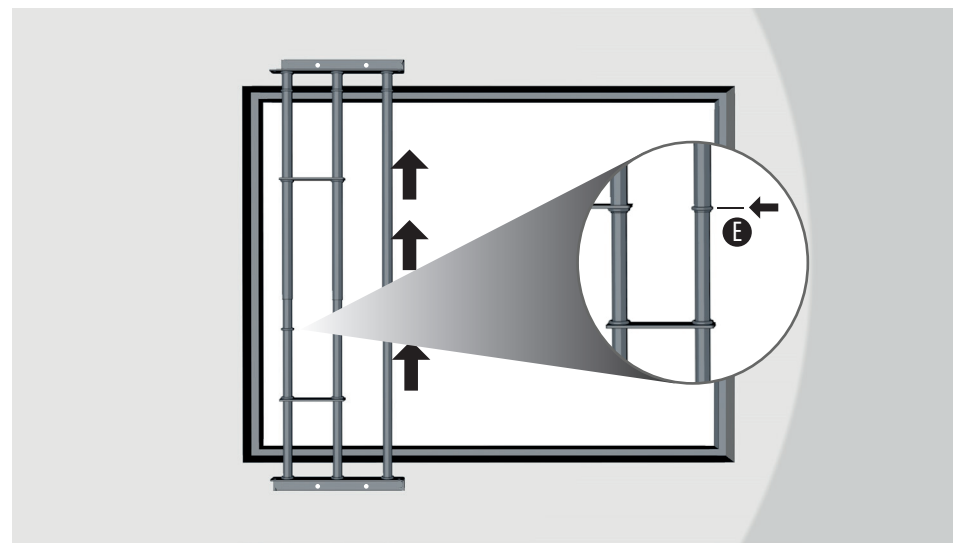

⑤ Set module (s) using anchors and security screws.

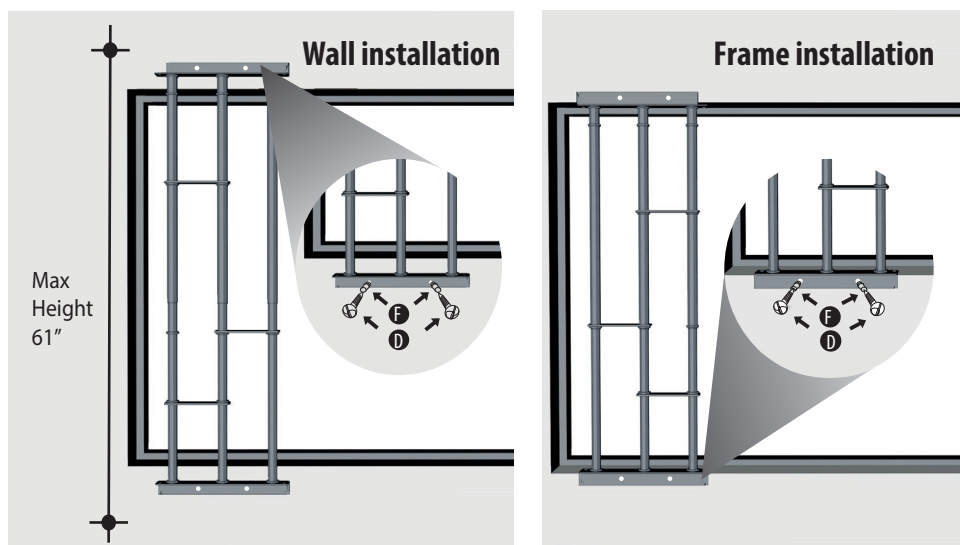

⑥ Installation finished

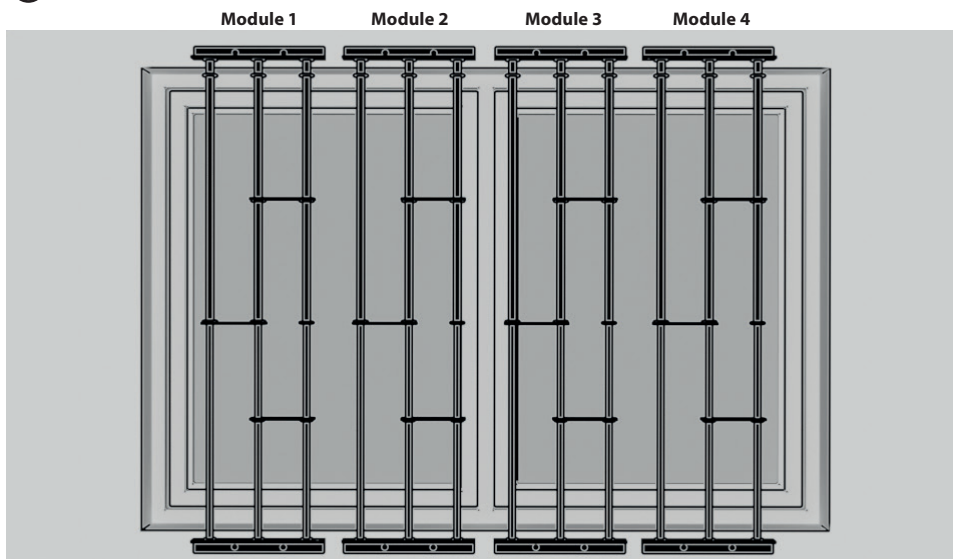

Safety Information: Please read and understand this entire manual before attempting to assemble, operate or install the product.

IMPORTANT: Consult local building and fire codes before installing window grilles, as they may not be compliant in all areas. **(THIS MODEL IS NOT COMPATIBLE WITH OUR EMERGENCY KIT.)**